



C BZ L2 L1 D1/ D0/  
READER 2 NB NA V- V+  
12VDC OUT

C BZ L2 L1 D1/ D0/  
READER 1 NB NA V- V+  
12VDC OUT

PRT-RDM2-DIN

POWER

STATUS

FAULT



READER 1



RELAY 1

DOOR 1

1

REX 1

2

SENSE 1

3

REN 1

4



READER 2



RELAY 2

DOOR 2

5

REX 2

6

SENSE 2

7

REN 2

8

N+ N- NA NB  
12VDC IN RS485 NETWORK

Z1 Z2 Z3 Z4 Z5 Z6 Z7 Z8  
DOOR1 REX1 SENSE 1 REN 1 DOOR2 REX2 SENSE2 REN2

V+ V- NO C NC NO C NC  
12VDC OUT RELAY 1 RELAY 2

