 


BZ L1 NB NA D1/ D0/  
READER 2 Z8 V- Z7 Z6 V- Z5 V- V+  
ZONE INPUT 5-8 12VDC OUT

BZ L1 NB NA D1/ D0/  
READER 1 Z4 V- Z3 Z2 V- Z1 V- V+  
ZONE INPUT 1-4 12 VDC OUT

POWER



ETHERNET



R1

READER



RELAY 1



BELL

1

2

3

4

STATUS



MODEM



R2



RELAY 2

5

6

7

8

FAULT

PRT-CTRL-DIN

ZONE

N+ N- NA NB  
12VDC IN RS485 NETWORK

B+ B- NOCOMNC NOCOMNC  
BELL RELAY 1 RELAY 2

T1i R1i T1o R1o  
MODEM

USB

ETHERNET 1

