



ELT-KLED

EliteSuite LED Keypad

Installation Manual

PUBLICATION INFORMATION

First Publication

Draft Document Release Only
Updated fire zone information

Second Publication

Option Menu Navigation Updated
Card Reader Interface Options Added

Third Publication

Slave Keypad Options Added
Slave mode Zone Wiring Diagrams Added

Fourth Publication

Tamper Monitor Option Added
Slave mode Zone Numbering and Wiring Updated

Fifth Publication

Slave mode Removed

CONTENTS

INTRODUCTION	1
Hardware Compatibility	1
WIRING CONFIGURATION	2
Introduction	2
Keypad Wire Loom Colour Coding	2
Communication Connection	3
Zone Input Wiring	4
Fire Zone Input Wiring	5
PGM (Programmable Output)	6
Indicator Lights.....	6
Binary Number Display	6
DEVICE CONFIGURATION	8
Device Configuration Mode Access	8
Address Selection ([MENU] , [1]).....	8
Device Options ([MENU] , [2])	9
Device Default ([MENU] , [3])	9
LOCAL INSTALLER LOGIN	9
Introduction	10
TIMING (MENU 1)	11
Entry Delay Timer ([MENU] [1], [1])	11
Exit Delay Timer (Menu 1, 2)	11
Alarm/Siren (Menu 1, 3)	12
OPTIONS (MENU 2)	14
General Options (Menu 2, 1)	14
Arming Options (Menu 2, 2).....	15
Reporting Options (Menu 2, 3)	17
Panic Options (Menu 2, 4)	19
ZONES (MENU 3)	21
Selecting a Zone	21
Zone Type.....	21
Zone Options.....	22
CONTACT	24
Contact.....	24

INTRODUCTION

This document details the wiring configuration of the EliteSuite condominium control keypad and installer programming functions.

Hardware Compatibility



This manual is written for hardware version 208-4125-020 or higher and covers firmware application 1.04. This firmware communicates with a EliteSuite enabled Protégé System Controller firmware version 1.07 or above.

WIRING CONFIGURATION

Introduction

The wiring structure of the EliteSuite keypad uses an encrypted RS485 communication interface. Connections should be made in a daisy chain configuration, avoiding star and stub connections.

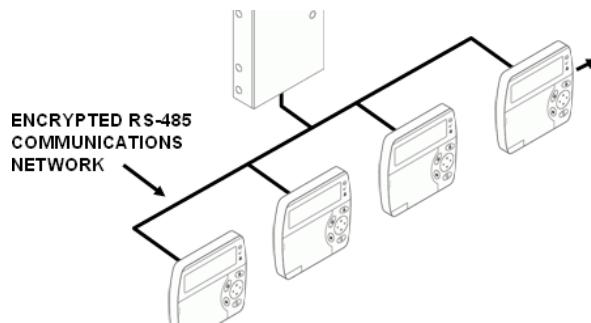


Figure 1 - Condominium Keypad Communication

Keypad Wire Loom Colour Coding

The condominium keypads are supplied with a wire loom attachment and are connected using a keyed 10 position snap lock connector. The 10 way wiring loom connection uses the following colour coding.

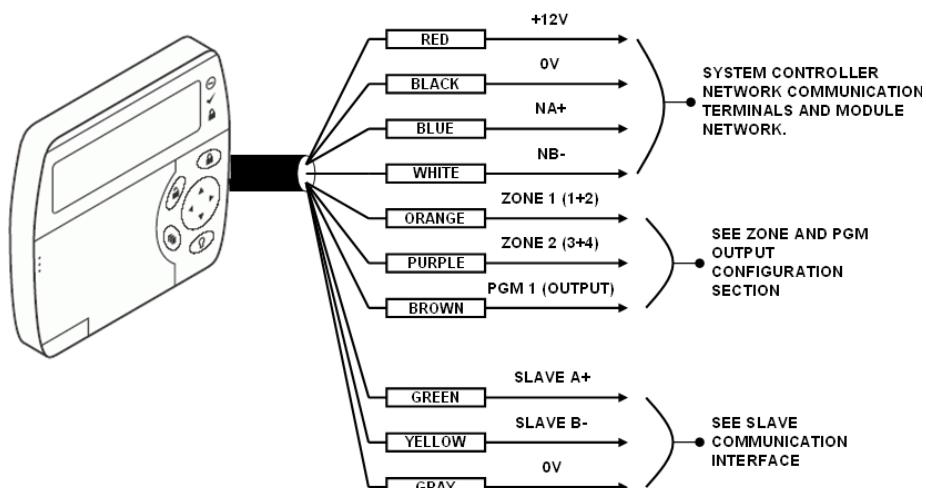


Figure 2 - Wire Loom Colour Coding and Function

Communication Connection

Support for up to 250 keypads per condominium controller is provided, connection to the system controller uses the network communication RS-485 interface. This interface is an isolated interface and requires power to be supplied to the N+ and N- terminals.

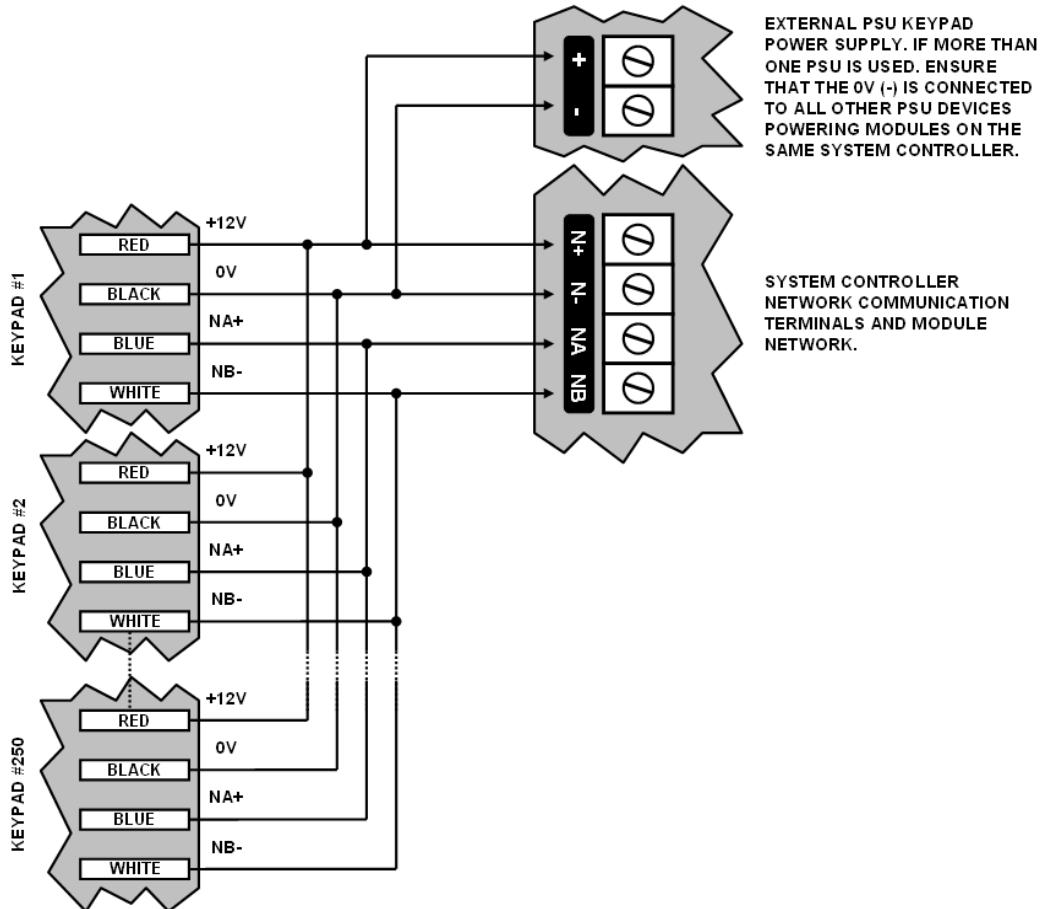


Figure 3 - Wire Loom Colour Coding and Function



When using more than one PSU to supply multiple wiring runs of condominium keypads only connect the +12 output of ONE power supply unit to the N+ and N- terminals of the controller. Each PSU unit should have the common (0V or -) connected together to ensure a common 0V.

Zone Input Wiring

The EliteSuite LED Keypad is capable of connecting to 4 zone inputs, each zone input can then be programmed to perform the required function in the system.

The following diagrams show each of the zone wiring configuration settings that are possible. The programmed zone configuration for the EliteSuite LED Keypad is made in the option settings. Refer to the *General Options Section* on Page 14 for the programming of the zone configuration.

- ?(?) **When using a tamper input on a device the tamper contacts must be normally closed and wired in series.**
- ?(?) **All resistors required to wire the zone configurations are provided with the EliteSuite LED Keypad in the accessory bag.**

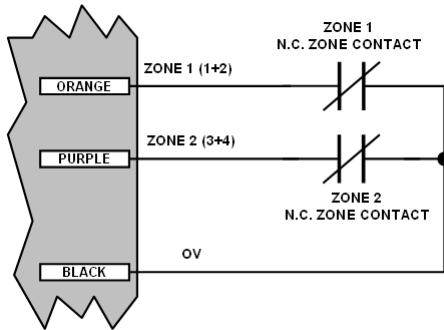


Figure 4 - 2 Zone Input (No Resistors)

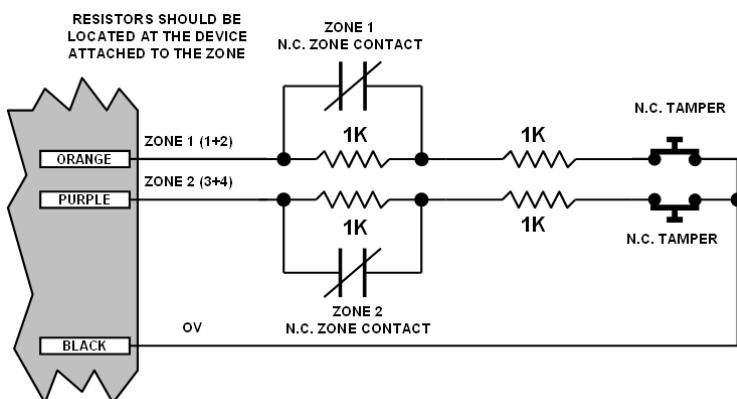


Figure 5 - 2 Zone Input (1K and 1K)

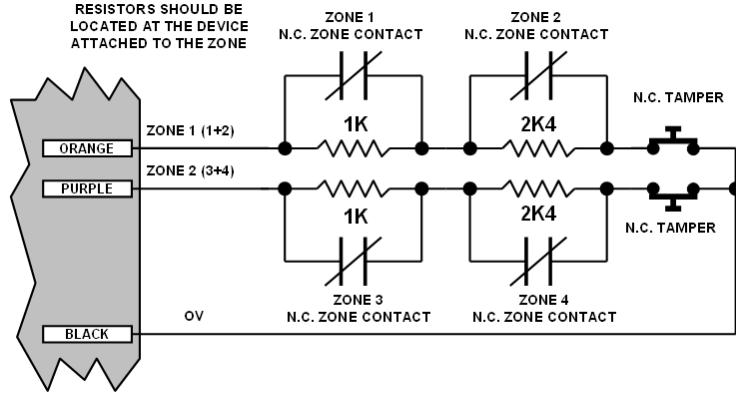


Figure 6 - 4 Zone Input Duplex Mode (1K and 2K4)

Fire Zone Input Wiring

When wiring a zone to be a fire zone input the current programmed zone options will determine what resistors and configuration is required, refer to the *General Options Section* on Page 14 and the zone configuration diagrams in the *Zone Input Wiring Configuration* on Page 4.

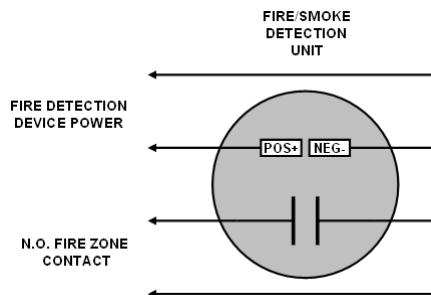


Figure 7 - Fire/Smoke Detection Input

- ?(?) When a fire zone is connected to a zone input that is used in the duplex zone configuration a fire zone fault will NOT BE shown when the fire zone has a shorted condition as this is shown as all zones closed. A Fire Loop trouble will be shown when the zone is tampered.
- !(!) Fire zones that are installed in duplex mode operation are not recommended. Fire zones should ALWAYS be connected using the EOL resistor method (2R) as this provides both open and short circuit monitoring.

PGM (Programmable Output)

The EliteSuite LED Keypad uses a programmable output (PGM) that will activate during an alarm condition. This output can be programmed to either:

- Follow the status of the alarm siren time or the fire alarm setting
- Follow the armed / disarmed status of the keypad.

Connect a relay or other interface device to this open collector output for activation of ancillary devices. The behaviour of this output can also be inverted in the programming, see the General Options section 0 for details on PGM programming.

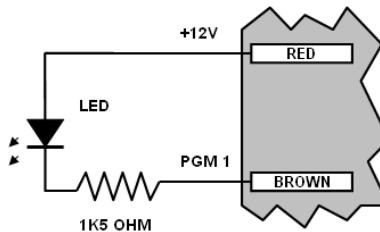


Figure 8 - LED Indicator Output

Indicator Lights

The EliteSuite™ LED keypad features three status indicator lights showing the condition of the EliteSuite™ Security System.

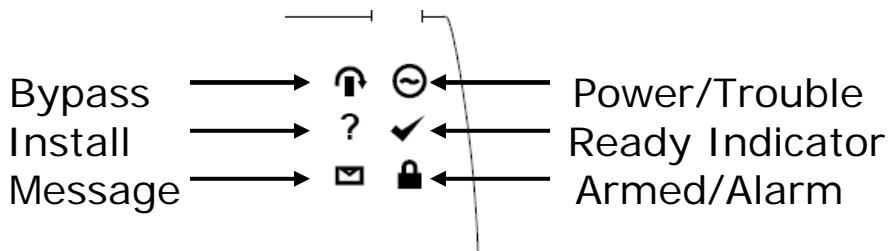


Figure 9 - Indicator Lights


Binary Number Display

The EliteSuite™ LED keypad displays programming information such as timers and addresses using the 8 Zone LED's. The Zone LED's will be lit in binary mode, meaning that you must add the **place value** of each LED together to obtain the programmed value. The **place values** are shown in the table below:

ZONE LED	VALUE
Zone 1	128

Zone 2	64
Zone 3	32
Zone 4	16
Zone 5	8
Zone 6	4
Zone 7	2
Zone 8	1

Binary Number Display Example

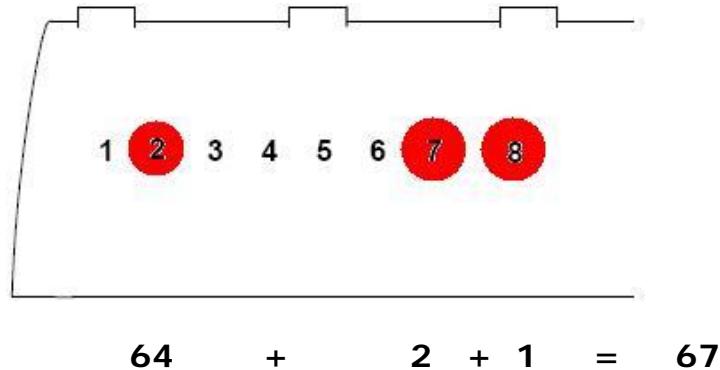

DEVICE CONFIGURATION

Device Configuration Mode Access

Before the EliteSuite LED Keypad module will communicate it must be assigned an address and programmed with specific options as to how it will operate. This is achieved by accessing the device configuration menu.



The device configuration menu can only be accessed in the FIRST 2 SECONDS when the device powers up. It is not able to be accessed when the system is operational.

To gain access to the device configuration menu, apply power to the device, and **within the first 2 seconds** after the four beep tone is heard, press the **[CLEAR]** key, followed by the **[ENTER]** key.

The **INSTALL** LED will then be lit to notify that device configuration mode has been entered. You can then press the key corresponding to the menu required from the following list.

Address Selection (**[MENU] , [1]**)

The address selection sets the address of the EliteSuite LED Keypad, this address must be a unique address on the system from 1 to 250.

Enter the address with the following keypress sequence:

[MENU] , [1] , [ADDRESS 1] , [ADDRESS 2] , [ADDRESS 3] , [ENTER]

The address will now be displayed on the zone LED's in **binary form** once all 3 digits have been entered.



ALL 3 Digits MUST be entered when programming an address. This means that for addresses below 100, you must enter [0] then the 2 digits of the address. For addresses below 10, you must enter [0] , [0] followed by the address digit.

Device Options ([MENU] , [2])

The device options set options that relate to the mode of operation of the EliteSuite keypad.

To enter the Device Options Menu, press

[MENU] , [2]

To toggle options press the keys **[1]** to **[8]** , and the corresponding **Zone LED** will be lit when that option is **ENABLED**.

Pressing the **[ENTER]** key will save the options.

Option 1 – Reserved

Option 2 – Device Tamper

Enabled the Device tamper switch is monitored.

Disabled the Device tamper switch is not monitored.

Option 3 to 8 – Reserved

Device Default ([MENU] , [3])

To default all the Device Options, press

[MENU] , [3]

The **ARMED LED** will now flash, and you must press **[ENTER]** to confirm or **[MENU]** to cancel.

Exiting Device Configuration Mode

Once Device configuration is complete, press the **[CLEAR]** key to restart the keypad.



If you do not press any key for 45 seconds while in Device Configuration mode, the keypad will automatically restart.

LOCAL INSTALLER LOGIN

Introduction

The default local installer code is [0000]. To access the local installation menu, press:

[ENTER] , [0000]

The **INSTALL** LED will then be lit to notify that Installer mode has been entered.

One **Zone LED** will be lit to show you which selection from the current menu you are currently at. You can change your selection with the [**↑**] and [**↓**] keys and then press [ENTER] to access that menu item, or just press the **number key** corresponding to the menu item you wish to select.

The following pages will outline the menu selections available, along with their shortcut keys.

Notes on Installer Access

If a module update has been performed on the system controller and the user code at system controller user location 3 (UN00003) has been changed. The code that is entered in this setting is now the local installer code. This code is programmed system wide when an update is performed.

To disable the Installer Code on ALL EliteSuite keypads (Recommended) delete the code for User UN00003 by following the instructions in the EliteSuite System Reference Manual for deleting a user pin code.

You can not access the installer menu if the EliteSuite system is armed. Disarm the EliteSuite system before attempting to login with the installer code.

It is recommended that all installer modifications are completed and downloaded using the Protege System Management Suite (PRT-SMGT). Ensure a module update command is executed when modifications are being made.

TIMING (MENU 1)



ALL 3 Digits of the timer value MUST be entered when programming a timer. This means that for addresses below 100, you must enter [0] then the 2 digits of the address. For addresses below 10, you must enter [0] , [0] followed by the address digit.

Entry Delay Timer ([MENU] [1], [1])

The entry delay timer is programmable from 000 to 255 seconds (Default 30 Seconds).

To program the timer value, press

[MENU] , [1] , [1] , [TIM 1], [TIM 2] , [TIM 3] , [ENTER]

Where **TIM 1 ~ 3** are the timer value digits, entered using the 0 to 9 number keys.

Programming the entry delay timer to 0 will result in no entry delay operation for any zone that has been assigned the entry delay zone type.

Exit Delay Timer ([MENU] , [1] , [2])

The exit timer is programmable from 000 to 255 seconds (Default 30 Seconds).

To program the timer value, press

[MENU] , [1] , [2] , [TIM 1], [TIM 2] , [TIM 3] , [ENTER]

Where **TIM 1 ~ 3** are the timer value digits, entered using the 0 to 9 number keys.

Programming the exit delay timer to 0 will result in no exit delay, the system will immediately arm the EliteSuite System.

Alarm/Siren ([MENU] , [1] , [3])

The siren/alarm timer is programmed from 000 to 250 minutes (Default 4 minutes).

To program the timer value, press

[MENU] , [1] , [3] , [TIM 1], [TIM 2] , [TIM 3] , [ENTER]

Where **TIM 1 ~ 3** are the timer value digits, entered using the 0 to 9 number keys.

OPTIONS (MENU 2)

General Options ([MENU] , [2] , [1])

The general options set options that relate to the general operation of the EliteSuite keypad.

To enter the General Options Menu, press

[MENU] , [2] , [1]

To toggle options press the keys [1] to [8] , and the corresponding **Zone LED** will be lit when that option is **ENABLED**.

Pressing the [ENTER] key will save the options.

Option 1 - Zone Type Option 1

If duplex zone (Option 2) is not enabled then Option 1 will set the zone input configuration (EOL or NO EOL). EOL requires the use of 2 X 1K resistors to provide, Short, Alarm, Closed and Tamper Monitoring. NO EOL provides Alarm and Closed monitoring.

- Enabled EOL resistors are used (2R Mode) (2 Zones).
- Disabled NO EOL resistors are used (2 Zones).

Option 2 - Duplex Zone Operation

If Option 2 is set Option 1 does not have any function. When option 2 is set the zones will use a 1K and 2K4 resistor and provide monitoring for 2 zones.

- Enabled Duplex Zone Mode (4 Zones).
- Disabled Option 1 sets the zone configuration.

Option 3 - Beep On Trouble Condition

- Enabled the beeper will emit 4 beeps every 5 minutes if a trouble condition is present, to silence the trouble beep, view the trouble condition.
- Disabled no trouble beep will be generated.

Option 4 - Device Power Up Disarmed

- Enabled the system will power up disarmed regardless of the system status at the time power was lost.
- Disabled the system will power up in an exit delay condition if the power to the EliteSuite device was turned off during an exit delay cycle or if the system was in alarm or armed.

Option 5 – Reserved

Option 6 – PGM Output Follows Alarm Status

- Enabled the PGM Output will be enabled with the alarm siren time activation or fire alarm activation.
- Disabled the PGM Output will not change state regardless of the alarm status.

Option 7 – PGM Output Follows Area Status

- Enabled the PGM Output will be enabled when the EliteSuite system is armed, and disabled when the system is disarmed.
- Disabled the PGM Output will not change state regardless of the area status.

Option 8 – PGM Output Inversion

- Enabled the PGM Output will follow the operation programmed by options 6 and 7, but the output will be opposite to the behaviour described in those functions.
- Disabled the PGM Output will follow the programmed output behaviour of options 6 and 7.

Arming Options ([MENU] , [2] , [2])

The arming options set functions that relate to the arming of the EliteSuite system.

To enter the Arming Options Menu, press

[MENU] , [2] , [2]

To toggle options press the keys [1] to [8] , and the corresponding **Zone LED** will be lit when that option is **ENABLED**.

Pressing the [**ENTER**] key will save the options.

Option 1 - Allow Fast Regular Arming

- Enabled the system can be FAST ARMED by pressing and holding the closed padlock key.
- Disabled FAST ARMING is disabled.

Option 2 - Allow Fast Stay Arming

- Enabled the system can be FAST STAY by pressing and holding the [STAY] key.
- Disabled FAST STAY arming is disabled.

Option 3 - Allow Instant Arming During Stay Exit Delay

- Enabled the system will allow the stay key to be pressed and held during the exit delay of a stay arming cycle to allow the stay arming to be changed to an instant arm.
- Disabled pressing the stay key during the stay exit delay will have no function.

Option 4 - Allow Fast Force Arming

- Enabled the system can be FAST FORCE armed by pressing and holding the [FORCE] key.
- Disabled FAST FORCE arming is disabled.

Option 5, 6, 7 and 8 - Reserved

Reporting Options ([MENU] , [2] , [3])

The reporting options are a set of functions that relate to the reporting of information to the on site monitoring application or offsite central station. The system can further be configured for each reportable event to go to monitoring station and the local on site monitoring.

To enter the Reporting Options Menu, press

[MENU] , [2] , [3]

To toggle options press the keys **[1]** to **[8]** , and the corresponding **Zone LED** will be lit when that option is **ENABLED**.

Pressing the **[ENTER]** key will save the options.

Option 1 - Report Arming and Disarming

- Enabled the EliteSuite keypad will send a message to the system controller when the system is armed or disarmed. If this option is disabled the current status of the EliteSuite keypad will not be valid. It is recommended this and the Report Alarm options are always enabled.
- Disabled no message will be sent.

Option 2 - Report Alarms (Fire and Normal)

- Enabled the EliteSuite keypad will send a message when an alarm occurs on the EliteSuite system. This also enables the sending of the alarm silenced and alarm timed out messages.
- Disabled no message will be sent for an alarm event.

Option 3 - Report Zone Bypass

- Enabled the system will report when the EliteSuite system is armed with zones that have been bypassed.
- Disabled no message will be sent when the user arms the system with zone(s) bypassed.

Option 4 - Report Zone Fault

- Enabled the system will report any zone fault trouble condition to the system controller. This will not indicate the zone that has the fault as this will be shown on the local keypad and in the trouble view menu.
- Disabled no zone fault message will be sent.

Option 5 - Report User Menu Access

- Enabled the system will report when the master user has accessed the main menu.
- Disabled no message will be sent when the master access's the main menu.

Option 6 - Report Local Installer Access

- Enabled the system will report when the local installer code is used to gain access to the local installation options.
- Disabled no message will be sent when the installer access's the installer menu.

Option 7 - Report Extended Information

- Enabled the system will report extending information such as the device tamper and fire loop trouble conditions. These conditions do not generate an alarm in the system locally but can be used to generate an event at the local monitoring or remote monitoring center alerting the operator to a potential problem.
- Disabled no message will be sent when the extended functions are triggered.

It is recommended not to enable/disable or modify the settings of reserved options.

Panic Options ([MENU] , [2] , [4])

The panic options set functions that relate to the panic processing of the EliteSuite system.

To enter the Panic Options Menu, press

[MENU] , [2] , [4]

To toggle options press the keys **[1]** to **[8]** , and the corresponding **Zone LED** will be lit when that option is **ENABLED**.

Pressing the **[ENTER]** key will save the options.

Option 1 - 1+3 Silent Panic

- Enabled the system will send a silent panic alarm to the front desk when the 1+3 keys are held for a period of 2 seconds. No message will be displayed on the screen or alarm generated.
- Disabled the 1+3 will not cause any alarm.

Option 2 - 4+6 Medical Alarm

- Enabled the system will send a medical panic alarm to the front desk when the 4+6 keys are held for a period of 2 seconds. No message will be displayed on the screen or alarm generated.
- Disabled the 4+6 keys will not cause any alarm.

Option 3 - 7+9 Fire Alarm

- Enabled the system will generate a local fire alarm on the EliteSuite keypad and also alert the central station and on site monitoring.
- Disabled the 7+9 keys will not cause any alarm.

Option 4 - User 8 Duress Code Enabled

- Enabled the system will enable user code 8 to be a duress code user and on login will send a duress code to the central station or on site monitoring system.
- Disabled user code 8 will operate as a standard user.

Option 5, 6, 7 and 8 - Reserved

- Reserved.
- Reserved.

Do not modify the reserved options configuration.

ZONES ([MENU] , [3])

Selecting a Zone

To enter the Zone number selection menu, press

[MENU] , [3]

To select a zone to modify use the [**↑**] and [**↓**] keys to scroll through the available zones, and press the **[ENTER]** key to move to the next configuration menu for the selected zone. You may also shortcut to a particular zone configuration menu by pressing:

[MENU] , [3] , [ZONE NUMBER]

Where **ZONE NUMBER** is the number button corresponding to the required zone.



Once you have selected a zone, The Zone Type setup will be displayed by the LED corresponding to the current Zone Type being lit.

Zone Type

Once you have selected a Zone, you must select the Zone Type.

To select the Zone Type, use the [**↑**] and [**↓**] keys to scroll through the available types, and press the **[ENTER]** key to move to the next configuration menu for the selected zone.

You can also press the number button corresponding to the required zone type to instantly select that zone type and move to the Zone Options setup for this zone.

You must select a Zone Type from the following list:

Zone Types

- | | | |
|----------|-----------------|---|
| 1 | <i>Disabled</i> | Zone is disabled, does not function in the system. |
| 2 | <i>Delay</i> | Zone will have an entry delay when a user enters. |
| 3 | <i>Follow</i> | Zone will not cause an alarm if the entry delay has started otherwise the zone will be an instant zone. |

Use this to set the zone type for a motion detector that is located in an entrance area.

- | | | |
|----------|-------------------|---|
| 4 | <i>Instant</i> | Zone will cause an alarm immediately. |
| 5 | <i>24HR</i> | Zone will always cause an alarm immediately. |
| 6 | <i>Fire</i> | Zone is a fire zone and will generate an instant alarm. |
| 7 | <i>Fire Delay</i> | Zone is a delayed fire zone and will generate the fire delay beeping and require the user to follow the delay fire zone procedures to prevent a full fire alarm from being activated. |

Zone Options

The zone options select functions that relate to the operation of bypassing, force arming and stay arming.

Once you have selected a Zone Type for your selected zone, you must select the Zone Options.

To toggle options press the keys **[1]** to **[8]** , and the corresponding **Zone LED** will be lit when that option is **ENABLED**.

Pressing the **[ENTER]** key will save the options.

Option 1 - Bypass Allowed

- Enabled the zone can be bypassed. A fire zone can never be bypassed regardless of the bypass setting.
- Disabled zone can not be bypassed.

Option 2 - Stay Zone

- Enabled the zone is set as a stay zone. When the system is armed in stay mode this zone will not generate an alarm.
- Disabled the zone is not a stay zone.

Option 3 - Force Zone

- Enabled the zone can be force armed when it is not ready to be armed. A force armed zone will automatically be included in the alarm processing when the zone restores from the not ready condition.

- Disabled the zone is not able to be force armed.

Option 4, 5, 6, 7 and 8 - Reserved

- Reserved.
- Reserved.

It is recommended not to enable/disable or modify the settings of reserved options.

CONTACT

Contact

Integrated Control Technology welcomes all feedback. Please go to our website or use the information below.

Integrated Control Technology

P.O. Box 302-340
North Harbour Post Centre
Auckland
New Zealand

11 Canaveral Drive
Albany, Northshore City 0632
Auckland
New Zealand

Phone: +64-9-476-7124
Fax: +64-9-476-7128

www.integratedcontroltechnology.com



Integrated Control Technology Limited
11 Canaveral Drive, Albany, North Shore City 0632, Auckland, New Zealand
P.O. Box 302-340, North Harbour, Auckland, New Zealand
Phone: +64 (9) 476 7124
Fax: +64 (9) 476 7128