 
 


**BZ** **L1** **D1/ D0/** **NB** **NA** **Z8** **V-** **Z7** **Z6** **V-** **Z5** **V-** **V+**  
READER 2 ZONE INPUT 5-8 12VDC OUT



**BZ** **L1** **D1/ D0/** **NB** **NA** **Z4** **V-** **Z3** **Z2** **V-** **Z1** **V-** **V+**  
READER 1 ZONE INPUT 1-4 12 VDC OUT

  
**POWER**

  
**ETHERNET**

  
**R1**

  
**RELAY 1**

**1**

**2**

**3**

**4**

  
**STATUS**

**READER**

  
**BELL**

**ZONE**

  
**FAULT**

  
**R2**

  
**RELAY 2**

**5**

**6**

**7**

**8**

PRT-CTRL-DIN

**N+** **N-** **NA** **NB**  
12VDC IN RS485 NETWORK

**B+** **B-** **NOCOMNC** **NOCOMNC**  
BELL RELAY 1 RELAY 2

**USB**

  
**ETHERNET 1**

